



**INSTALLATION
INSTRUCTIONS**

Accessory

CARPET FLOOR MATS
P/N 08P15-TM8-120

Application

2010 INSIGHT

Publications No.

All 40880


Issue Date

MARCH 2009


Put this information in the glove box with the vehicle owner's manual.

PARTS LIST


Driver's side floor mat

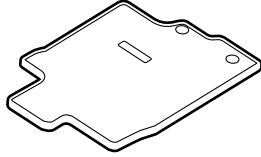


Passenger's side floor mat

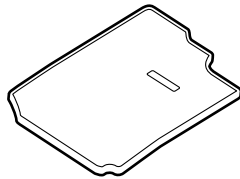

Rear floor mat

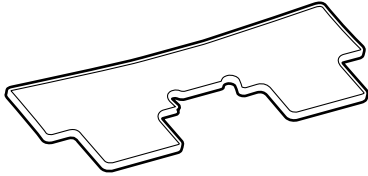

2 Anchors




TOOL AND SUPPLIES REQUIRED

Flat-tip screwdriver

Utility Knife

Scale

Illustration of the Floor Mats Installed in the Vehicle

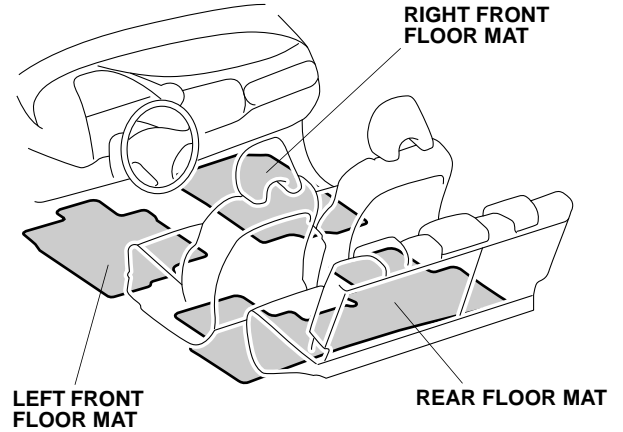


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Before installing the floor mats, identify their installation positions.
- Anchors are required for the driver's side of the vehicle; they prevent the floor mat from sliding forward and interfering with the pedals.
- If you remove the driver's floor mat, make sure you reanchor it when you put it back in the vehicle.
- If you replace the floor mat, use factory mats designed to be used with the anchors.
- Make sure to re-anchor the mats after removing the floor mat.

1. Slide the driver's seat all the way back.
2. Locate the two rear recesses in the carpet. Using a utility knife, slit the carpet at the front of the two recesses.

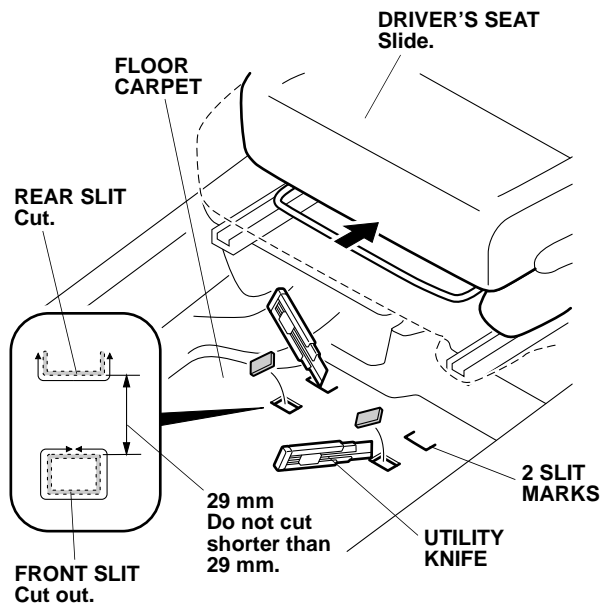


3. Locate the two front recesses in the floor carpet. Using a utility knife, cut out each front recess. Make sure the distance between the slit and the cutout is not less than 29 mm.

4. Lift the floor carpet to create a space to insert the anchor between the floor carpet and insulator.

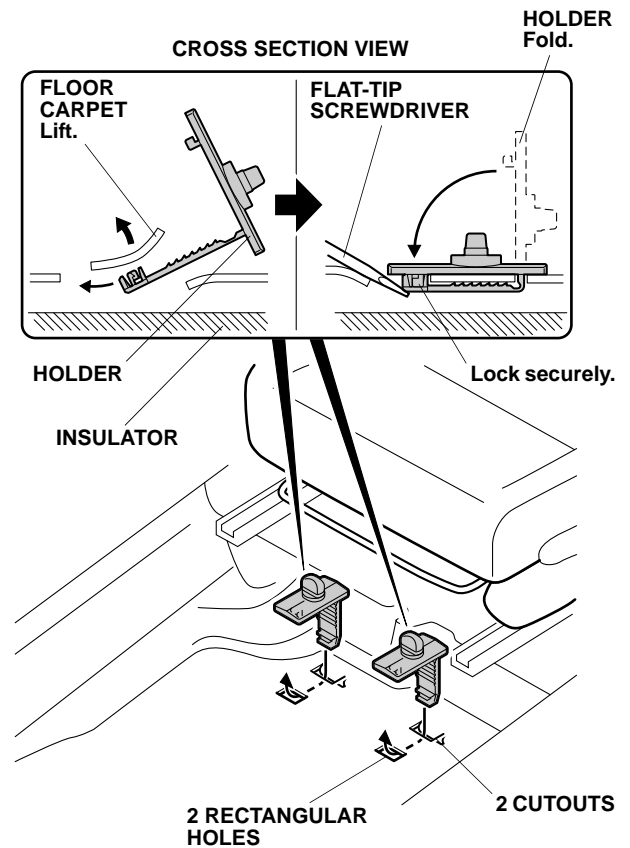


5. Insert the two anchors into the two cutouts, and move the lock tabs forward into the rectangular holes. If necessary, use a clip remover or equivalent tool to open the hole in the floor carpet.
6. Fold the anchors down to lock them in place. Make sure the floor carpet is not caught in the anchor. Confirm that each anchor is locked securely using a flat-tip screwdriver.

- Align and position the driver's side floor mat over the anchors as shown.

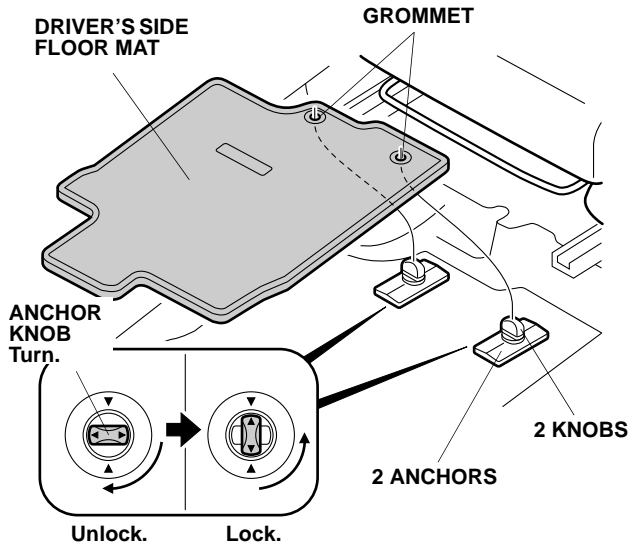

- Turn the knob on each anchor to secure the driver's side floor mat.
- Install the passenger's side floor mat.

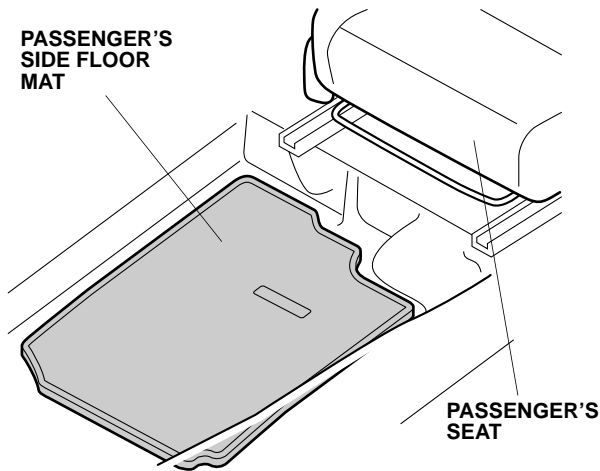

- Install the rear floor mat.

